



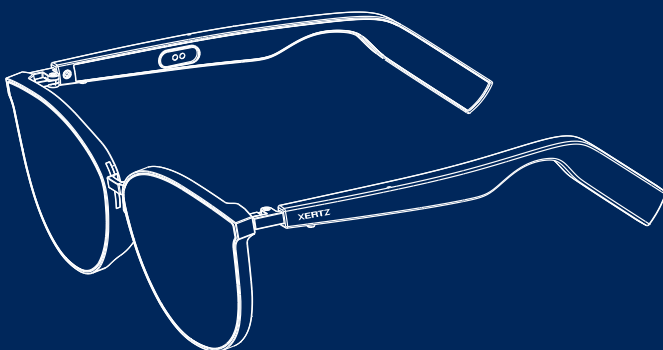


OPTIO XZ01 AUDIO FRAMES


QUICK START GUIDE



- (EN) Power on: please long press the button on the left and right leg for 3 seconds. Start automatically when stop charging (warning tone: power on)
Power off: please long press the button on the left or right leg for 4 seconds when turn off the Bluetooth (warning tone : power off) Auto power off when charging.

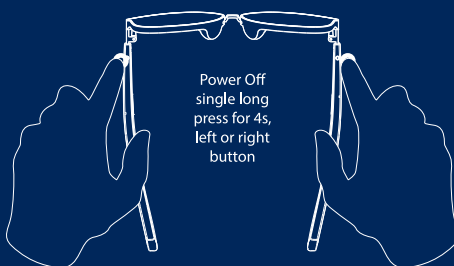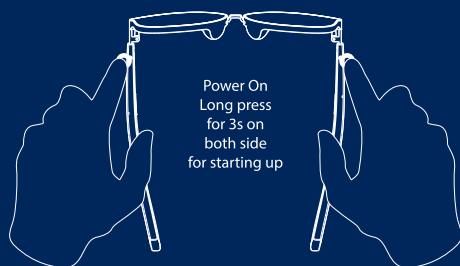

- (EN) 1. Turn on glasses, open the phone's Bluetooth, and search the name of xz01, the device is connected.
2. After successfully connecting, warning tone connected.
3. When the device disconnect warning tone.disconnected.

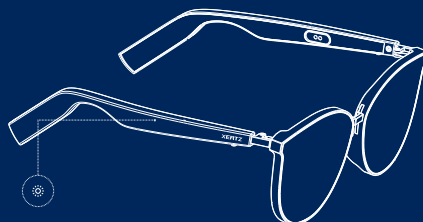


- During pairing, red and blue light flasha tomatively
- Bluetooth is paired, blue LED light flash once per seconds



- (EN) 1. Short press button on the left or right log for answering or hanging up calls.
2. Long press button on the left or right leg for 1 second for refusing calls.
3. The conversation from glasses to receiver, long press button on the left or right leg for 1 second.
4. Adjust the volume during a call, double click button on the left leg to decrease speaker volume, double click button on the right leg to increase speaker volume.
(clicking the button not support adjusting volume during three way call)
When making a call, another call coming in and transfer calls to three way.
short press button on the left or right leg for 1 time.
6. When making a call, hang up a call to answer another call, long press button on the left or right leg for 1 second.
7. When making a call, keep one current call and reject another call, double click button on the left or right leg.





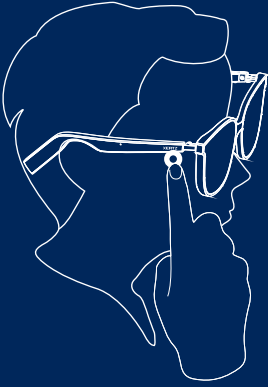

- (EN)
1. Short press button on the left or right leg to play or pause music.
 2. Double click button on the left leg to decrease the volume.
 3. Click 3 times button on the left leg to play the last music.
 4. Double click button on the right leg to increase the volume
 5. Click 3 times button on the right leg to play the next music.



- (EN)
- Standby or listening music, long press button on the left or right leg for 2 seconds to activate or deactivate the voice assistant.

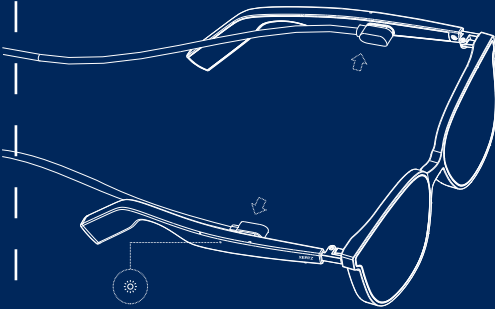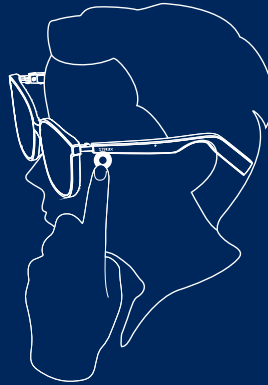

- (EN)
1. When there is no activity for 5 minutes, the glasses turning itself off.
 2. During charging, the red LED long bright
 3. When charging is completed, the light display turn off.



- During charging, the red LED long right



- When tharging is completed the light display turn off.



XERTZ™
Exploring Serenity

- THANK YOU -

Follow us on:
@xertzglobal

